


Retrofit mounting plate EP4M300-00

Duktor drive for 4 Units (1500min⁻¹)

Replacement for installation rack latte EP4FU3AM-00

Replacement for installation rack ER512-4-00 (ER512-4-01)

Replacement for installation rack ER503-4-00

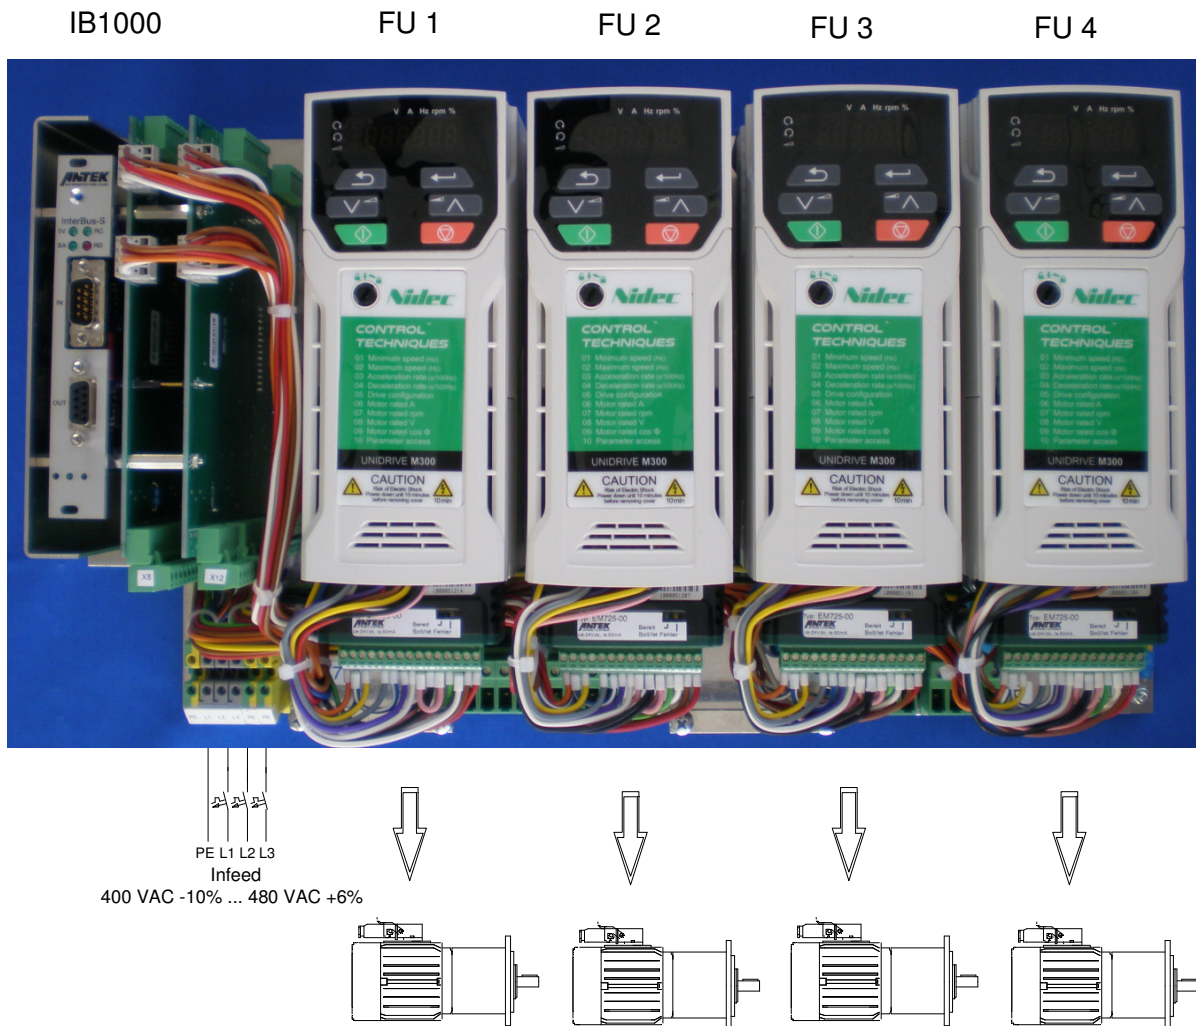

ANTEK GmbH
Im Köchersgrund 1
71717 Beilstein

 +49 7062 94060
 +49 7062 940620
 info@antek-online.de
 www.antek-online.de

Technical Documentation	Retrofit EP4M300-00
Document	M0020BGB
Version	09/18

Content:

	Page
1. Retrofit mounting plate EP4M300-00.....	4
1.1 Specification.....	4
1.2 Drawing, Retrofit Mounting Plate EP4M300, Drawing –No. 4984	5
1.3 Wiring Plan, Retrofit Mounting Plate EP4M300 Infeed, Drawing -No. 4981	6
1.4 Connection Plan, Retrofit Mounting Plate EP4M300 Duktör Drive, Motor Connection, Drawing-No. 4996A	8
1.5 Retrofit Mounting Plate EP4M300 for Duktör Drive, Motion Monitoring System, Drawing-No. 4997A.....	9
1.6 Retrofit Mounting Plate EP4M300, Wiring Plan, Adaption Plate A519 for FU1 Drawing-No. 4990A.....	10
1.7 Retrofit Mounting Plate EP4M300, Wiring Plan, Adaption Plate A519 for FU2 Drawing-No. 4991	11
1.8 Retrofit Mounting Plate EP4M300, Wiring Plan, Adaption Plate A519 for FU3 Drawing-No. 4992	12
1.9 Retrofit Mounting Plate EP4M300, Wiring Plan, Adaption Plate A519 for FU4, Drawing-No. 4993	13
2. Retrofit EP4M300 Parameter set.....	14
2.1 EP4M300-00	14
3. Controller M300 Operation and software structure	14
3.1 The Display	14
3.2 Operating unit.....	15
3.3 Fault message.....	15
3.4 The Display:	16
4. EM725 Level converter, target / actual comparison	16
4.1 The electronics module EM725	16
5. InterBus Module Type IB1000-01	17
5.1 InterBus-S remote bus A422	17
5.2 Adapter board A519	19

1. Retrofit mounting plate EP4M300-00

1.1 Specification

General: The Retrofit mounting plate contains all components for the replacement of the installation rack EP4FU3AM-00, ER512-4-00, ER512-4-01 und ER503-4-00 such as the controller M300 with EM725 and the Interbus module IB1000. The mains connection and the pluggable motor connections are easily accessible. The control connections are pin-compatible, running on the corresponding terminals on the adapter board A519. An easy replacement of the previous units is ensured. Information regarding the regulator M300 please refer to the separate description.

Technical Design:



Nominal terminal voltage: 3x 400 VAC -10% ... 480 VAC +6%, 50/60Hz
 Nominal terminal current: 12 AAC
 Fuses: external ABB, S283-Z20 (UL specification)
Attention! **After the main voltage has been shut down, wait 30 s before the device is switched on again.**

Voltage supply

24V Interbus	24 VDC ± 20% Current consumption approx. 250 mA External fuses
24V-G (Devices)	24 VDC ± 20% Current consumption approx ca. 1,6 A, External fuses
24V-EFS (Motion Monitoring System)	24 VDC ± 20% Current consumption approx. 260 mA External fuses
24V-L (Fan)	omitted


Construction 4 Frequency converter M300-06-03 incl. EM725-00
1 Interbus Baugruppe IB1000-01

Weight 8,5 kg


Control terminals plug-in terminals (terminal width 0.25-1.5mm²)
 Power terminals plug-in terminals (terminal width 0.5-2.5mm²)
 Specification DIN 57110b
EN 60204
EN 55011 Class B

Motor connections the stated technical specifications are valid for cable lengths of up to 100 m when LAPPKABEL ÖLFLEX-190CY cable is used and proper EMC installation precautions are observed.


1.2 Drawing, Retrofit Mounting Plate EP4M300, Drawing –No. 4984

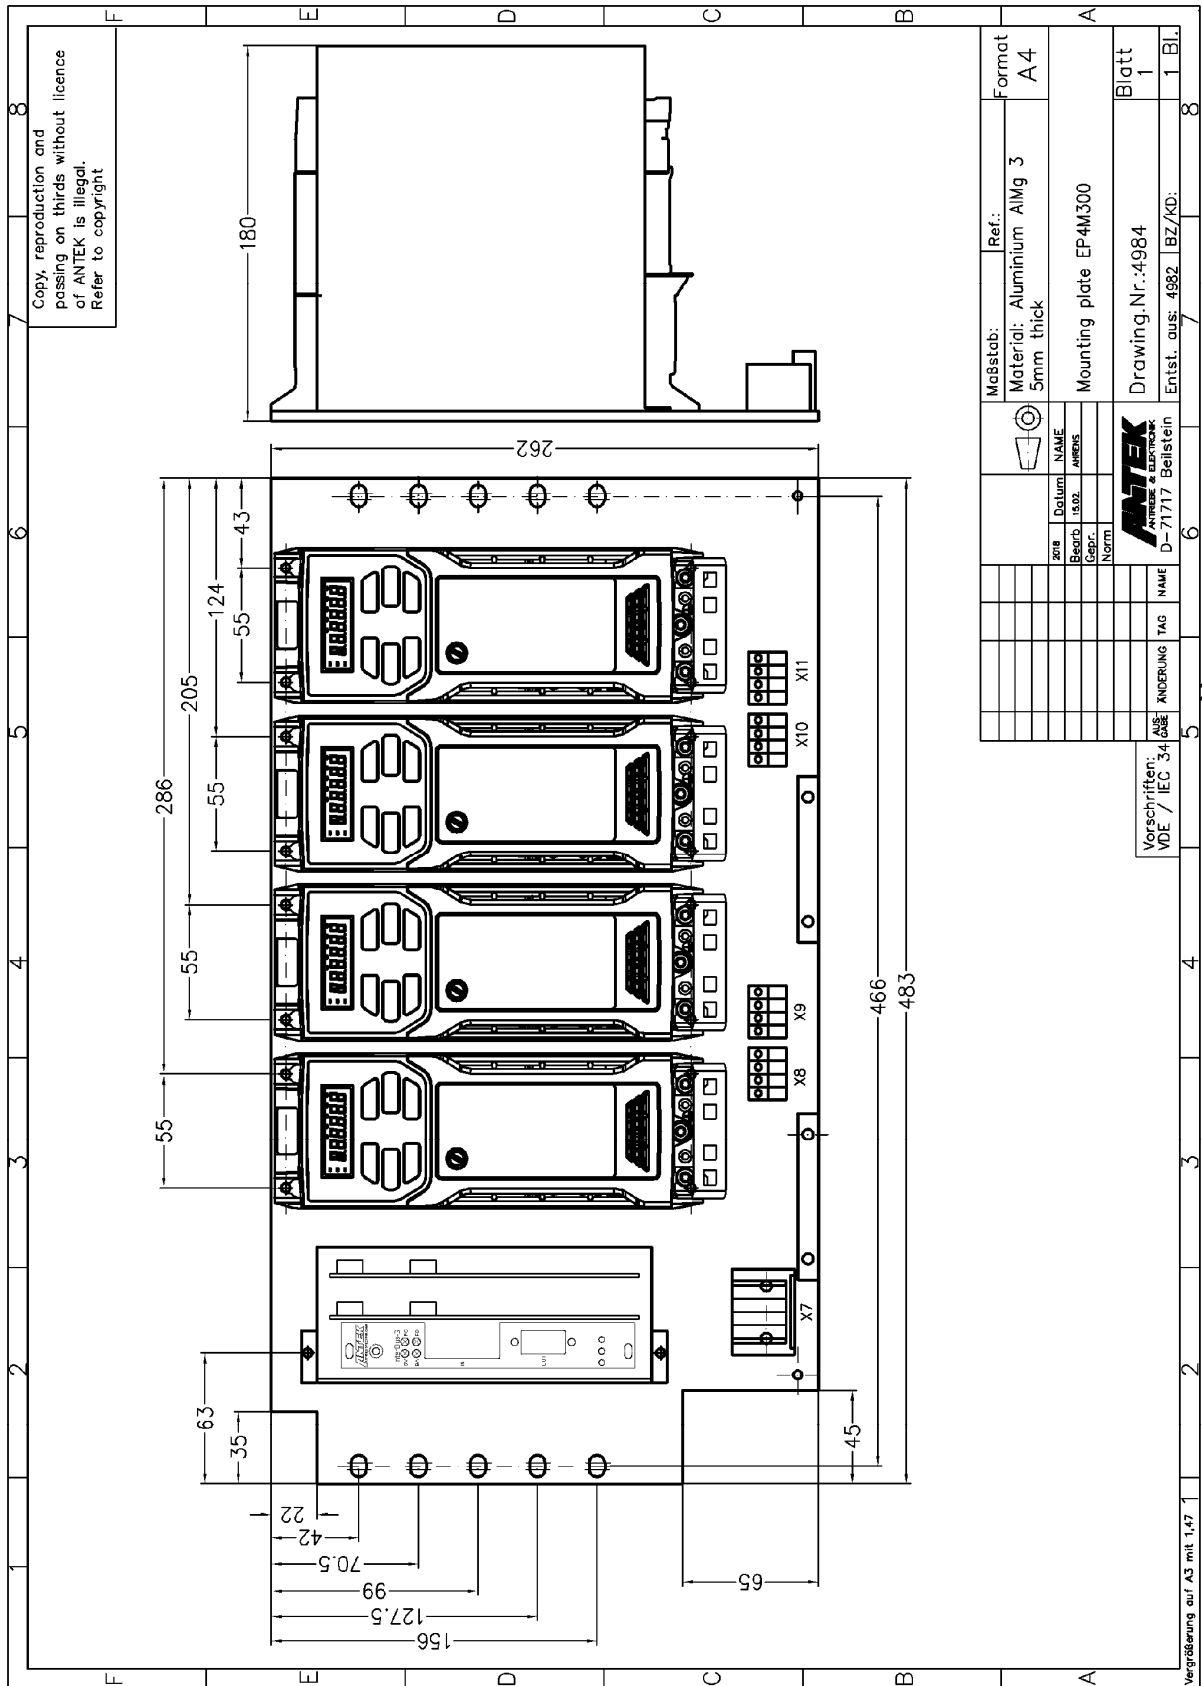

1.3 Wiring Plan, Retrofit Mounting Plate EP4M300 Infeed, Drawing -No. 4981

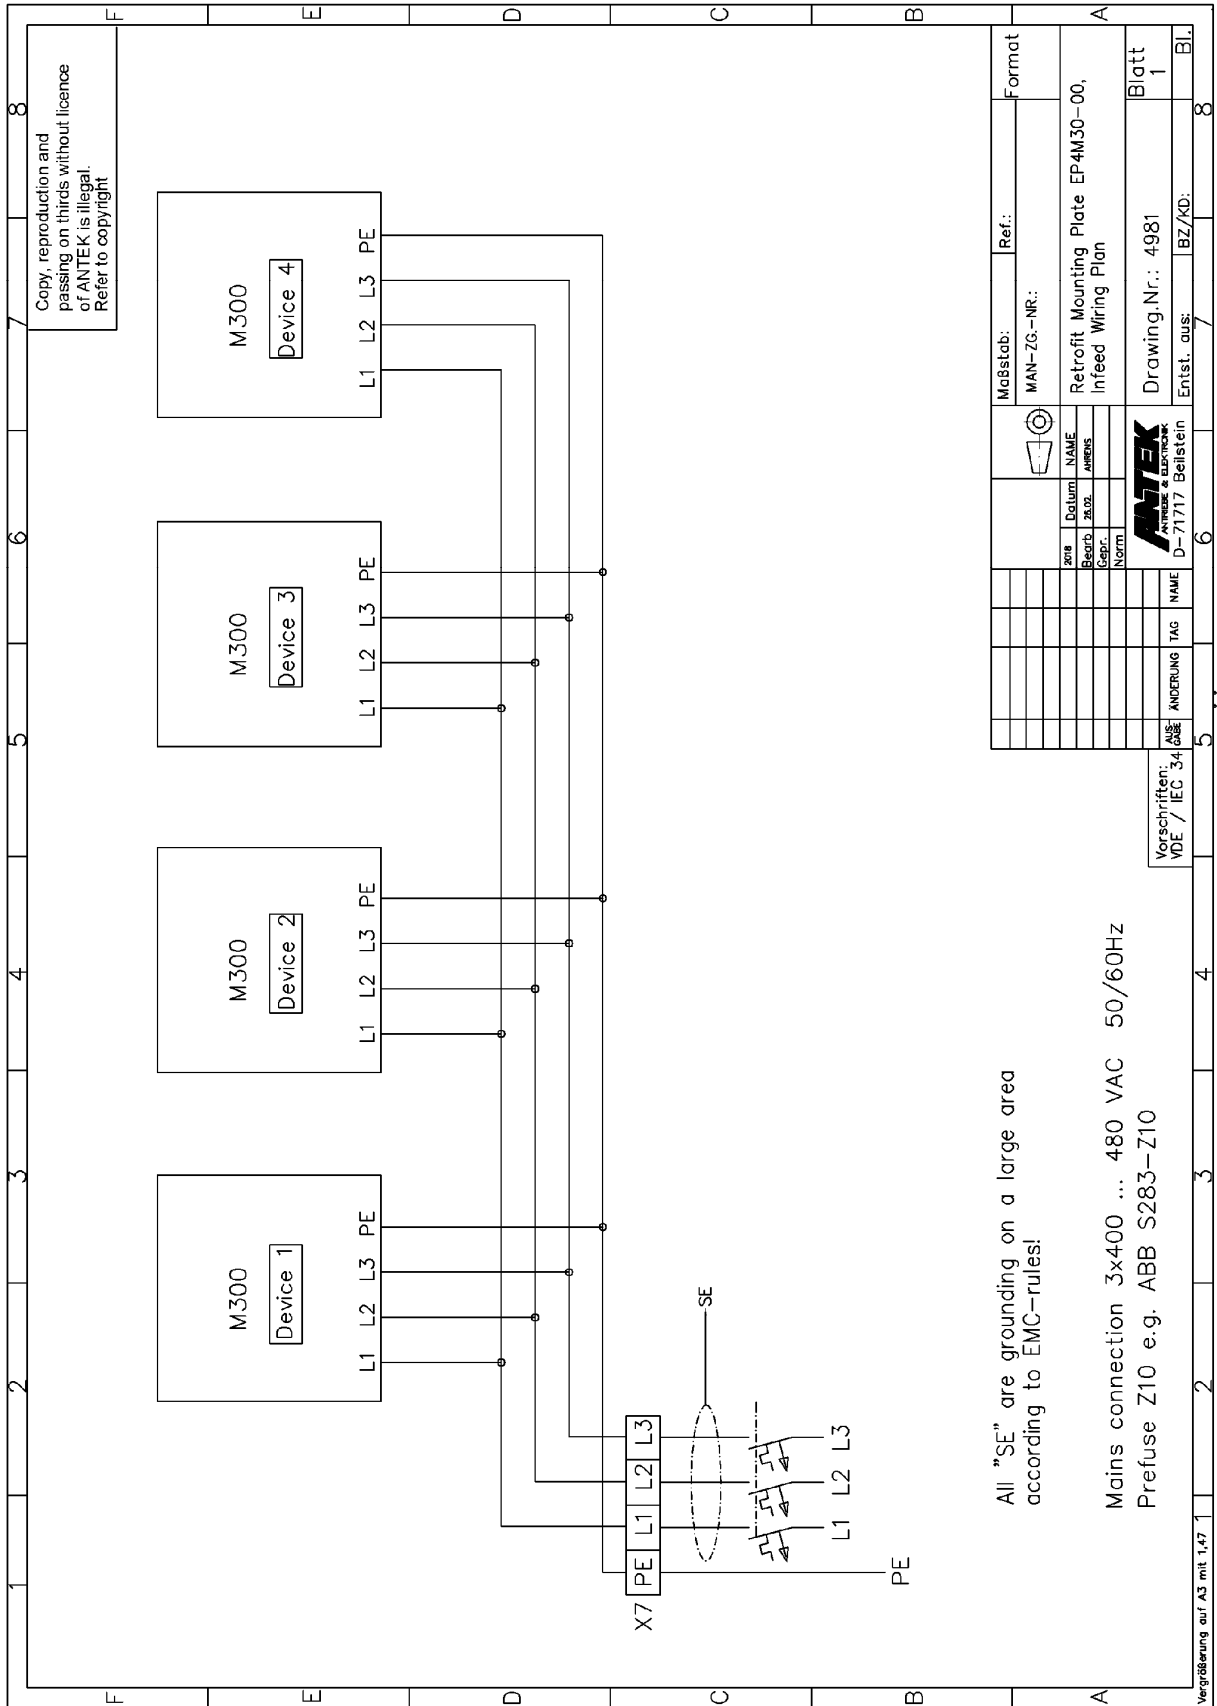


Terminal side: X7, X8, X9, X10, X11

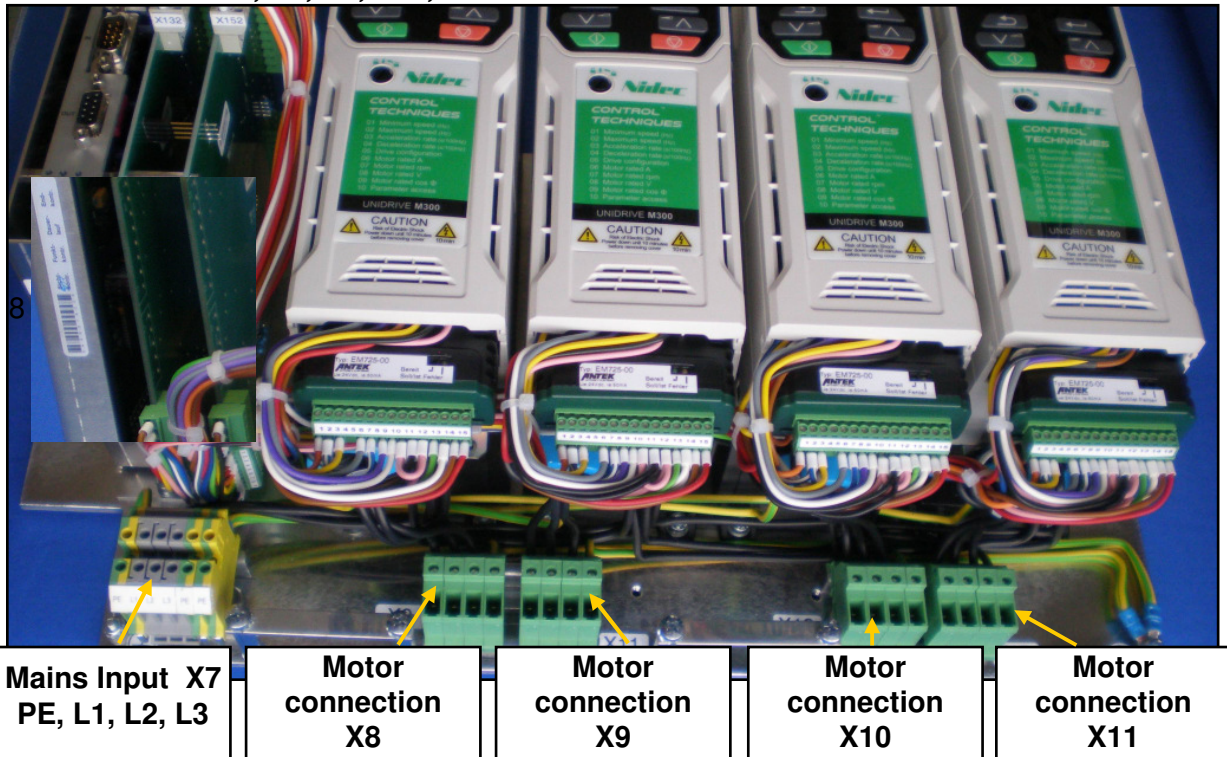


and connections X1, X2, X3, X4, X5 and X6



1.5 Retrofit Mounting Plate EP4M300 for Duktur Drive, Motion Monitoring System, Drawing-No. 4997A

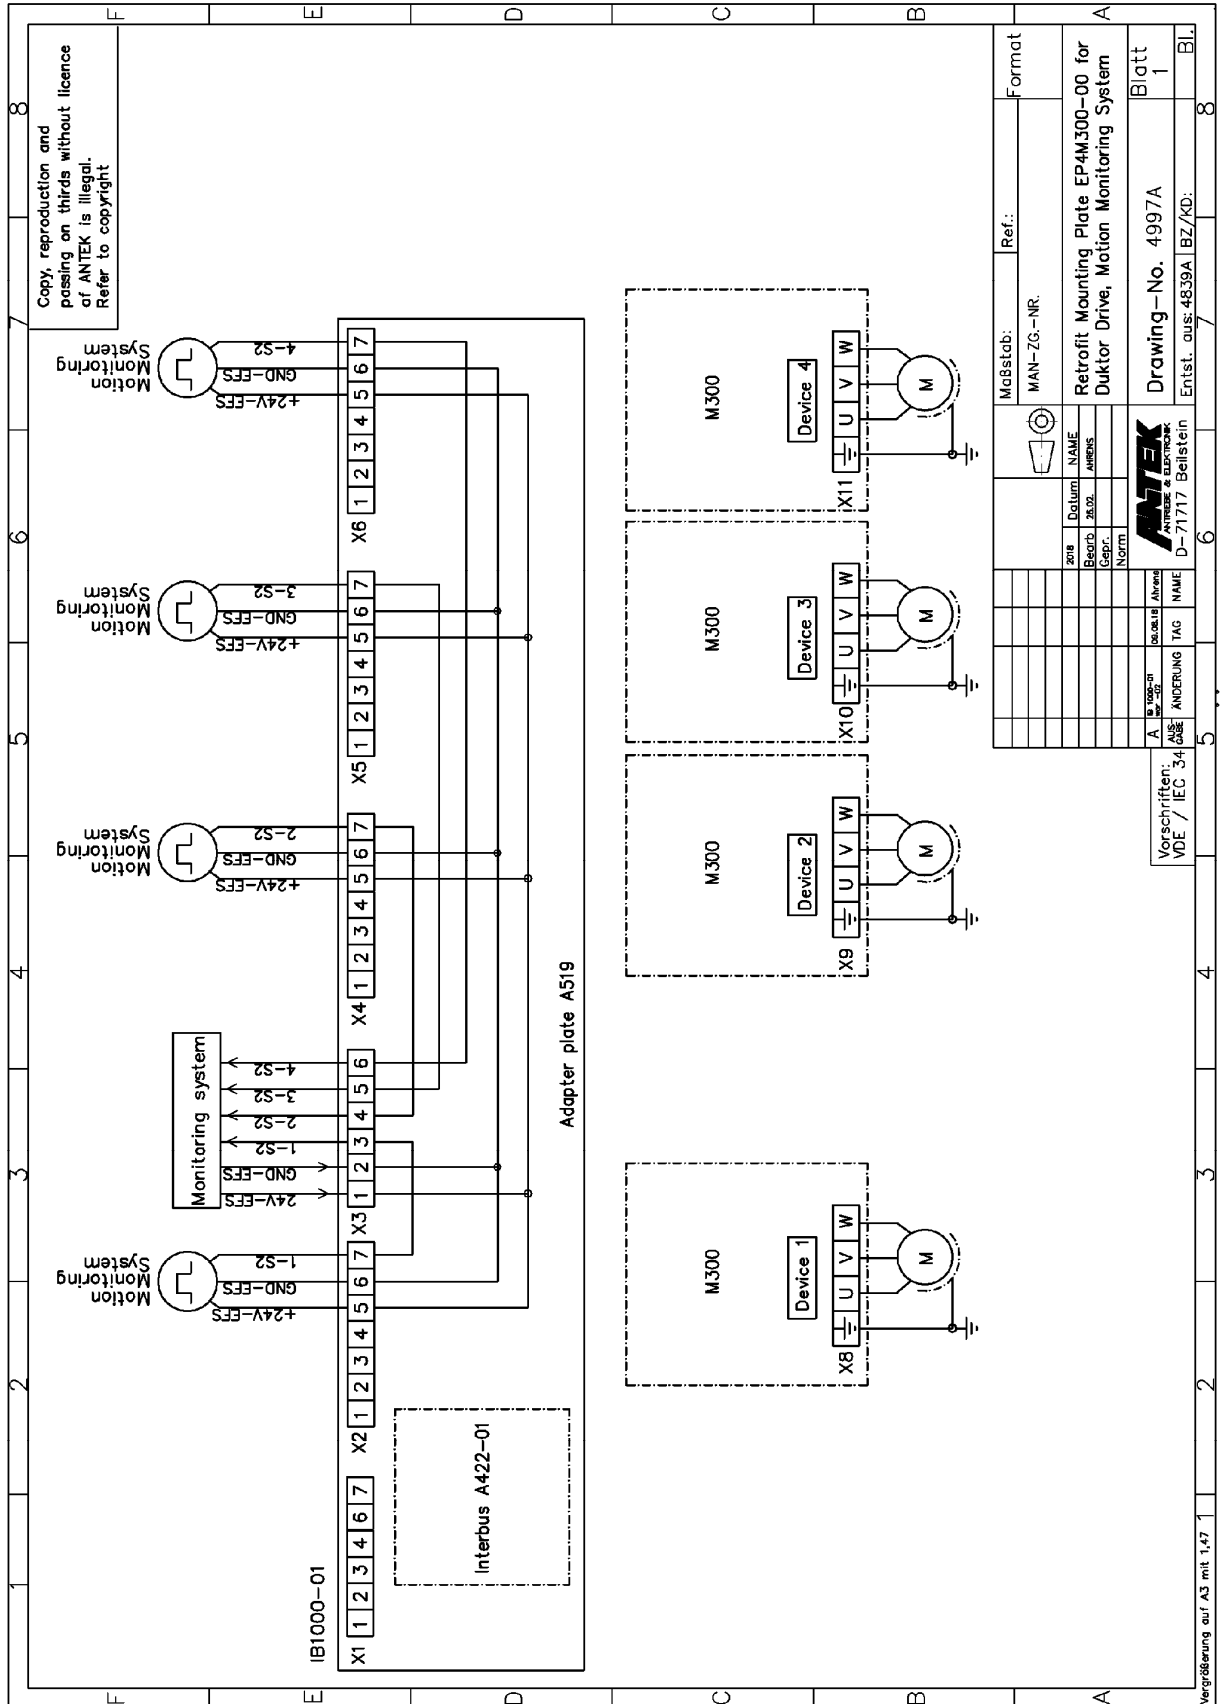


1.6 Retrofit Mounting Plate EP4M300, Wiring Plan, Adaption Plate A519 for FU1 Drawing-No. 4990

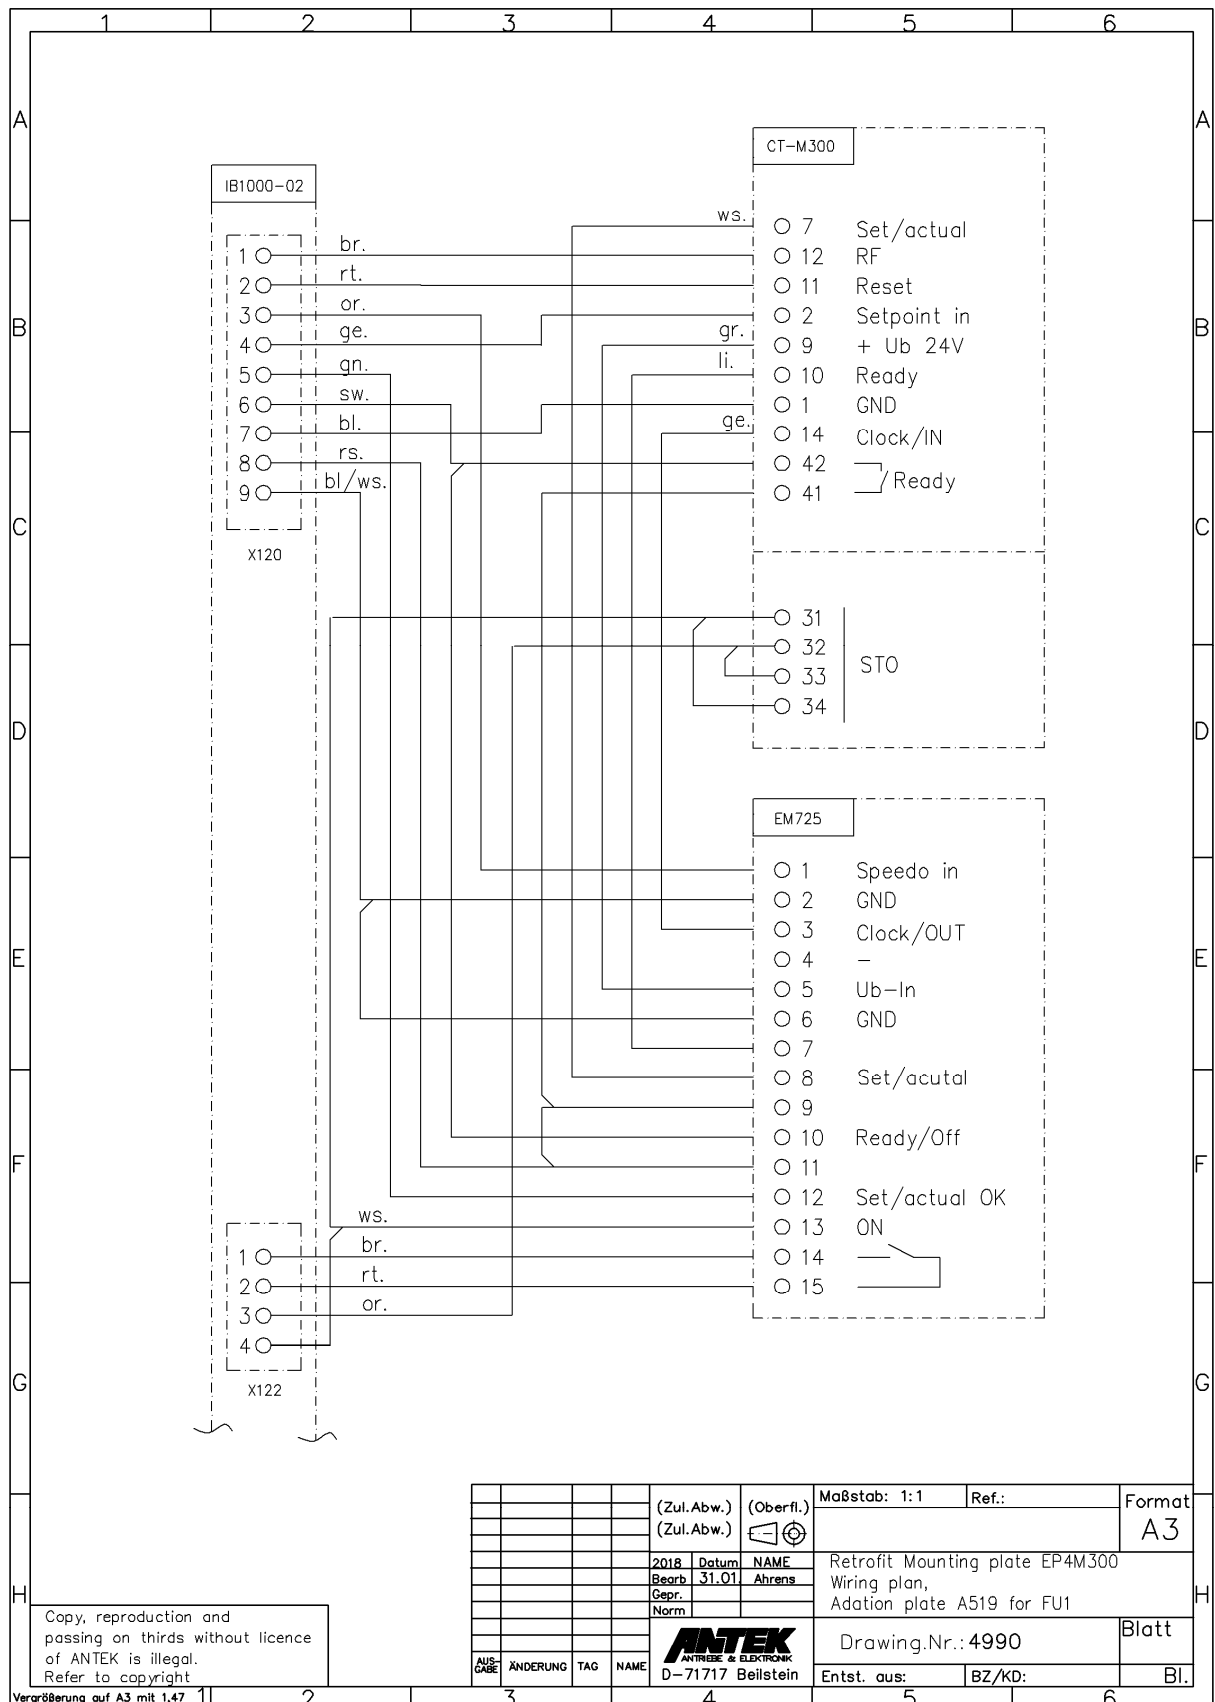

Copy, reproduction and passing on thirds without licence of ANTEK is illegal. Refer to copyright

				(Zul.Abw.) (Zul.Abw.)	(Oberfl.) 	Maßstab: 1:1	Ref.:	Format A3	
				2018 Bearb.	Datum 31.01	Retrofit Mounting plate EP4M300 Wiring plan, Adation plate A519 for FU1		Blatt	
					Gepr. Norm	Drawing.Nr.: 4990		Blatt	
						Entst. aus:		BZ/KD:	Bl.


1.7 Retrofit Mounting Plate EP4M300, Wiring Plan, Adaption Plate A519 for FU2 Drawing-No. 4991

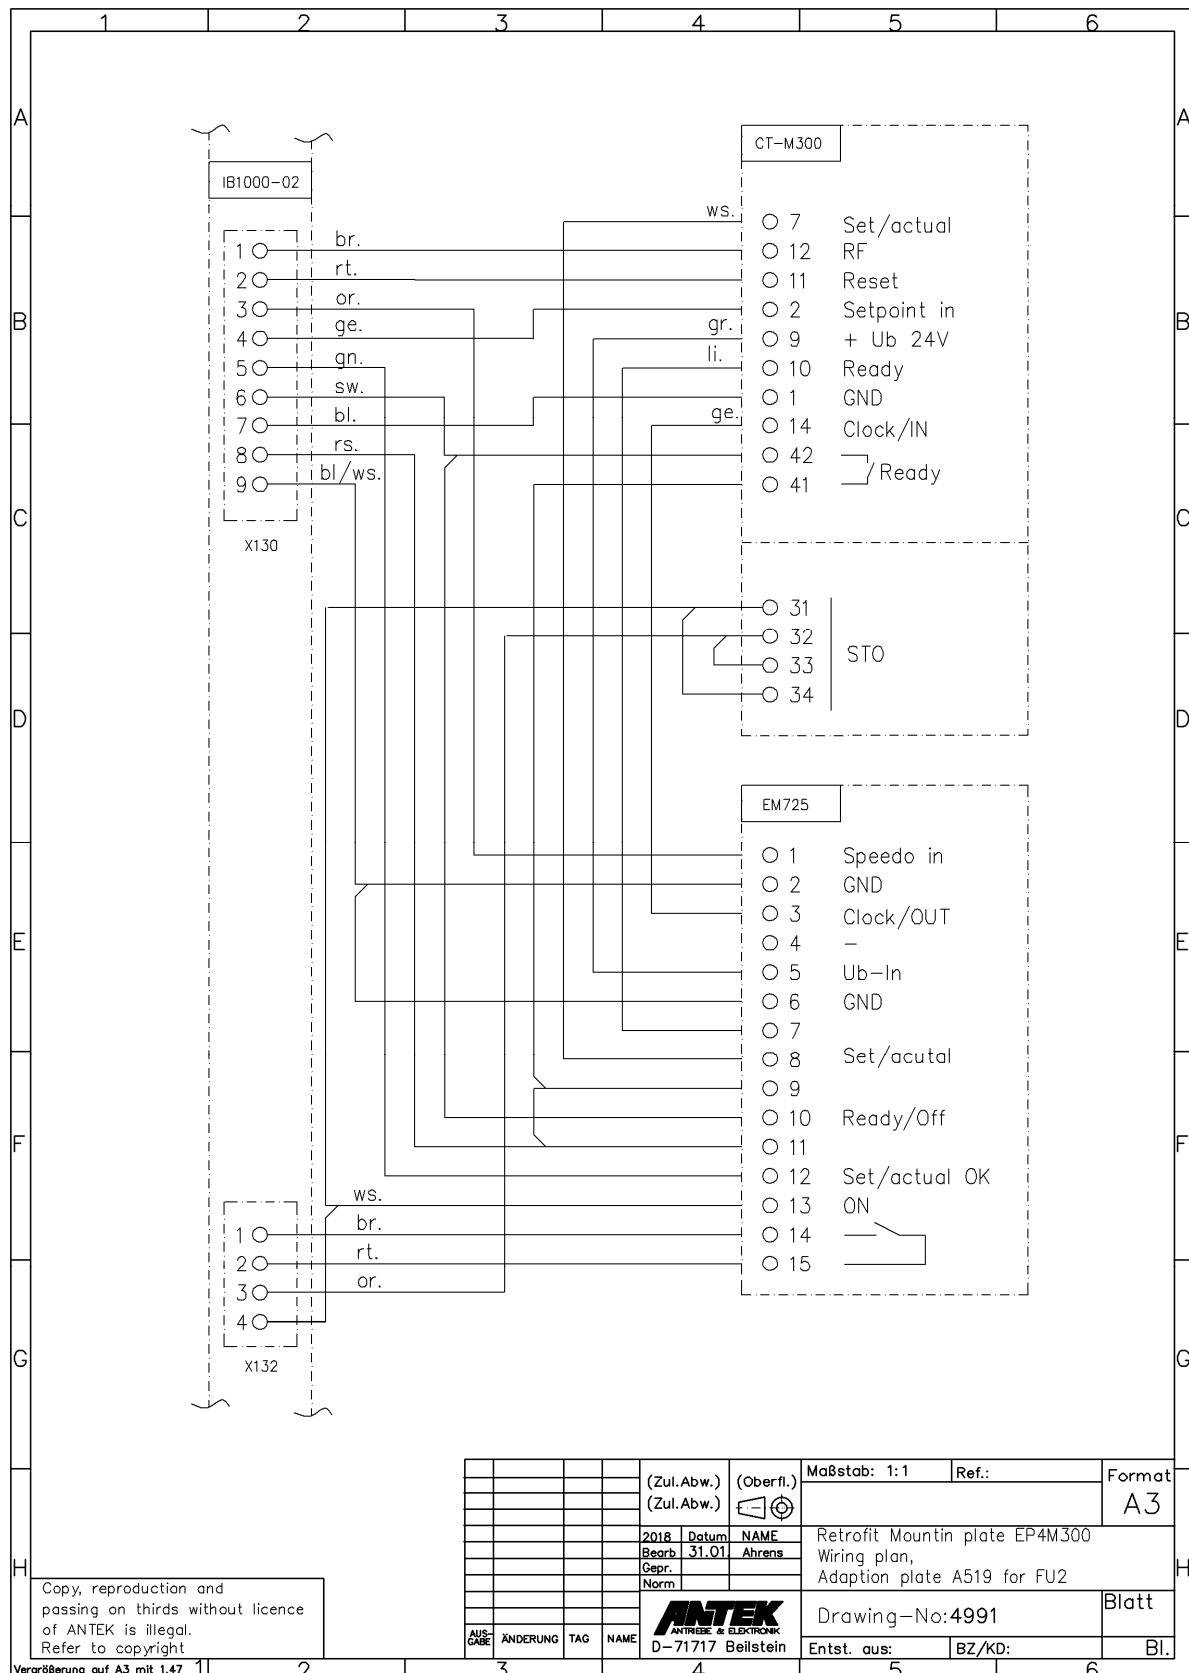

Copy, reproduction and passing on thirds without licence of ANTEK is illegal. Refer to copyright

				(Zul.Abw.) (Zul.Abw.)	(Oberfl.) ☉	Maßstab: 1:1	Ref.:	Format A3
				2018 Bearb. 31.01	Datum NAME Ahrens	Retrofit Mountin plate EP4M300 Wiring plan, Adaption plate A519 for FU2		
						Drawing-No:4991		Blatt
AUSGABE	ÄNDERUNG	TAG	NAME	ANTEK ANTRIEBE & ELEKTRONIK D-71717 Beilstein		Entst. aus:	BZ/KD:	Bl.

1.8 Retrofit Mounting Plate EP4M300, Wiring Plan, Adaption Plate A519 for FU3 Drawing-No. 4992

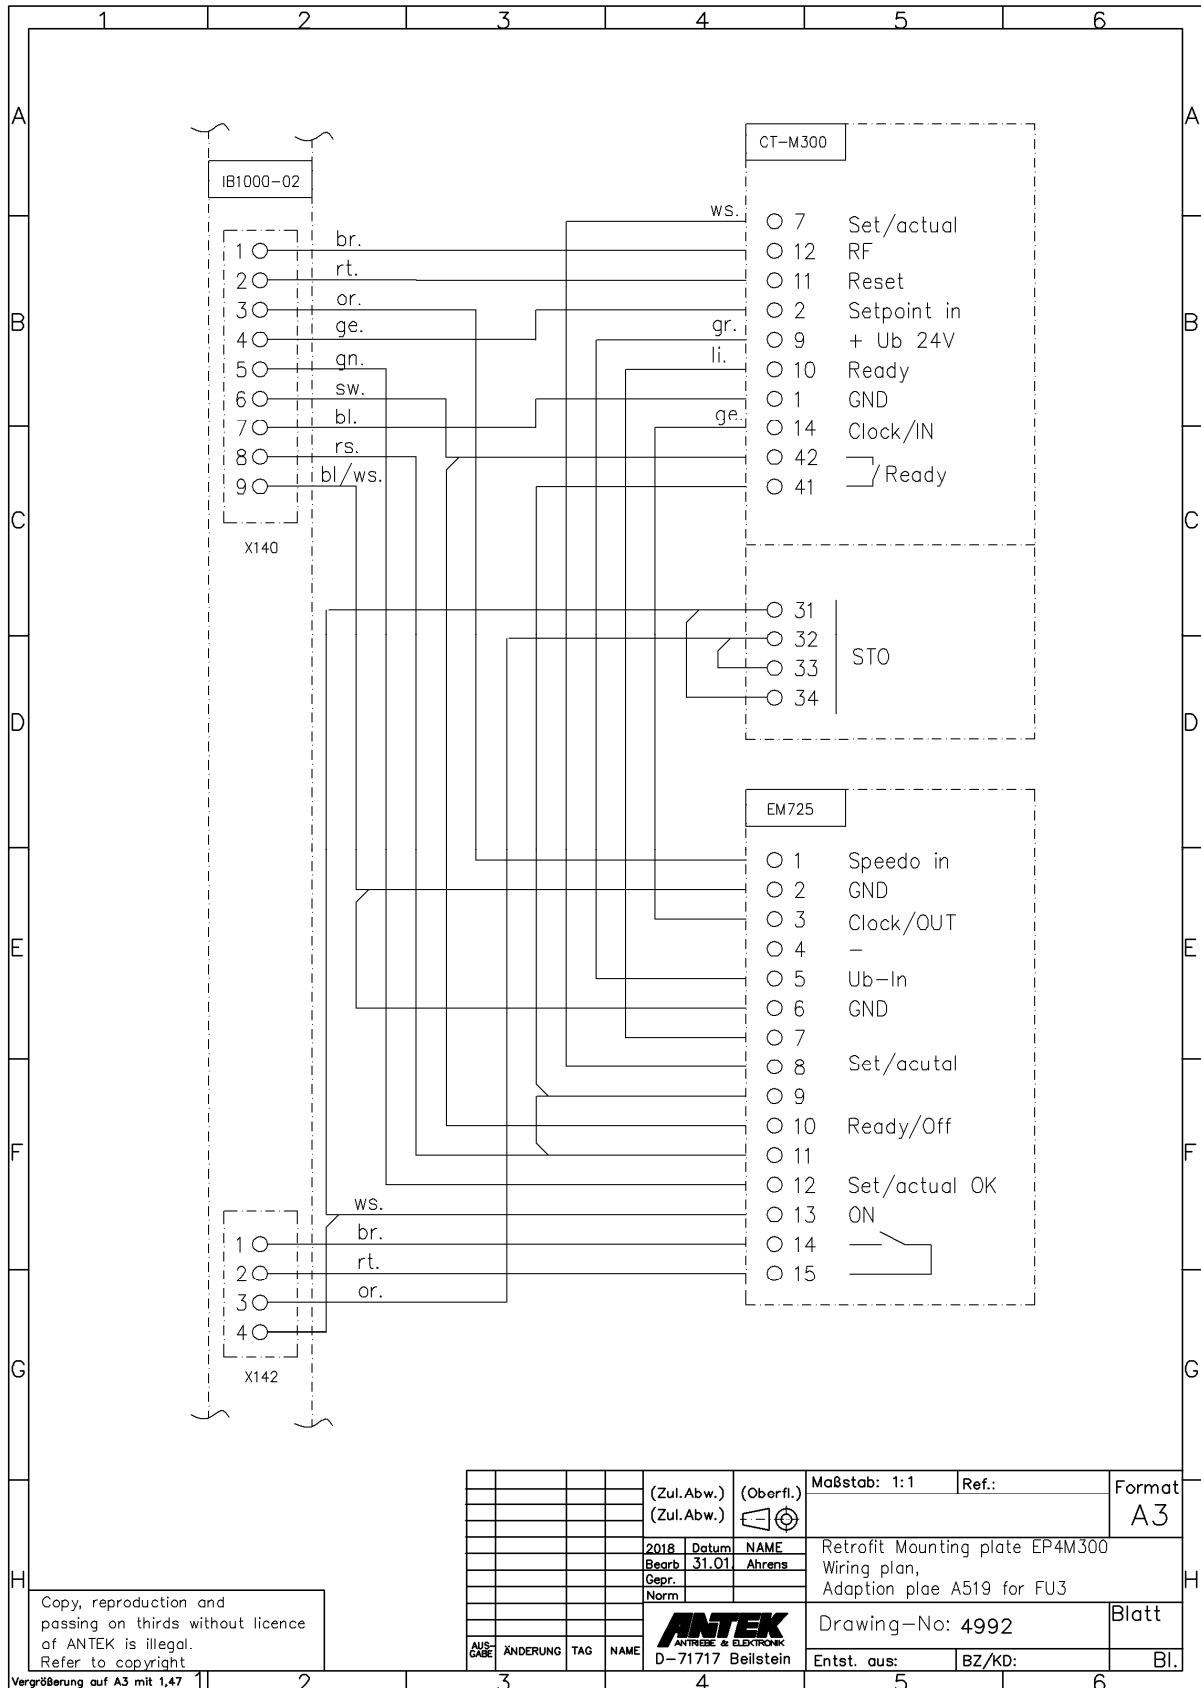


Copy, reproduction and passing on thirds without licence of ANTEK is illegal. Refer to copyright

				(Zul.Abw.) (Zul.Abw.)	(Oberfl.) ☐ ⊕	Maßstab: 1:1	Ref.:	Format A3
				2018 Datum Bearb 31.01 Gepr. Norm	NAME Ahrens	Retrofit Mounting plate EP4M300 Wiring plan, Adaption plate A519 for FU3		
				 D-71717 Beilstein		Drawing-No: 4992		Blatt
AUSGABE	ÄNDERUNG	TAG	NAME			Entst. aus:	BZ/KD:	Bl.

Vergrößerung auf A3 mit 1,47

1.9 Retrofit Mounting Plate EP4M300, Wiring Plan, Adaption Plate A519 for FU4, Drawing-No. 4993

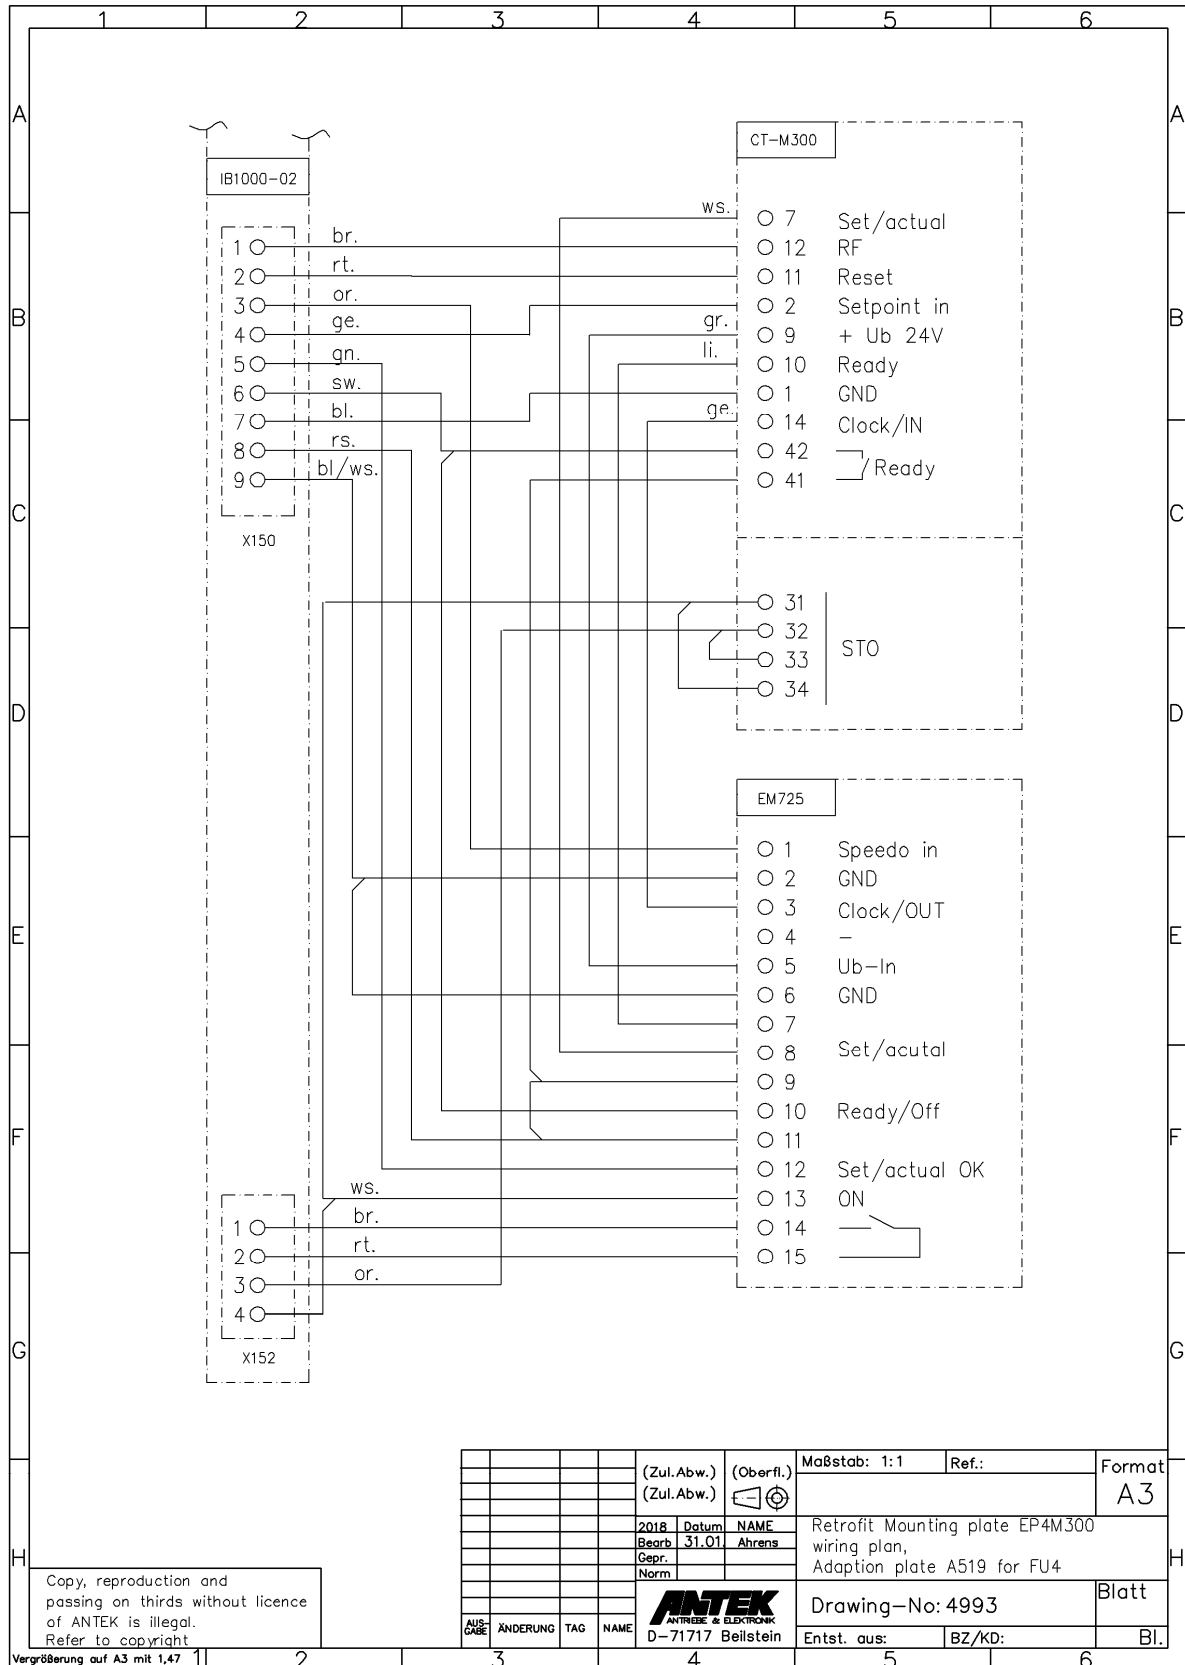

Copy, reproduction and passing on thirds without licence of ANTEK is illegal. Refer to copyright

				(Zul.Abw.) (Oberfl.)	Maßstab: 1:1	Ref.:	Format A3
				(Zul.Abw.)			
				2018 Datum NAME	Retrofit Mounting plate EP4M300 wiring plan, Adaption plate A519 for FU4		
				Bearb. 31.01 Ahrens			
				Gepr. Norm			
				ANTEK ANTRIEBE & ELEKTRONIK	Drawing-No: 4993		Blatt
				D-71717 Beilstein	Entst. aus:	BZ/KD:	Bl.

2. Retrofit EP4M300 Parameter set

2.1 EP4M300-00

This device description is supplied with the parameter set for 1500rpm.

In this connection the following frequency inverters are installed:

M300-06-03 with Parameter set **1500 min⁻¹**, analogue control

3. Controller M300 Operation and software structure

This chapter lists the user interfaces, menu structure, and safety levels of the drive.

(See also step by step instructions page 7, "step 10")

3.1 The Display

The control unit is firmly attached to the inverter. This will provide the user with information about the inverter operating status, alarms and shutdown codes. It also offers the possibility to change parameters, to operate and reset the inverter.



Note:

The red stop button is also used to reset the inverter in case of error! (RESET)

3.2 Operating unit

The display of the operating unit consists of a text line. Status information is displayed here.

Display	Description	Output stage of the inverter
inh	The inverter is disabled and can not be operated. The Drive Enable signal is not active.	disabled
rdy	The drive is ready to run. The drive enable is active, but the drive inverter is not active because the final drive run is not active.	disabled
StoP	The drive is stopped, holding zero speed.	enabled
Er. xxxx	A fault trip of the inverter has been triggered so that the motor is no longer controlled by the inverter. The error code is shown flashing on the display.	disabled
UV	The inverter is in the Undervoltage state	disabled
0-3000	The inverter runs and regulates the speed according to the specification.	enabled

3.3 Fault message

The display of the operating unit shows an error on this consists of a text line. Status information is displayed here.

Display	Description	
Er. UU	Under voltage converter	
Er. OVLd	Motor overload	
Er. IO AC	Overcurrent on the converter.	
Er. SOft	Software error	
Er. OU	Overvoltage converter	

To clear a fault, proceed as follows:

1. Turn off the inverter with controller enable, this goes e.g. on the contactor input. Then start the drive again externally. Message in the display (inh)
The ready signal shows OK again.
2. Press the red reset button 2x. The drive restarts immediately, if the release is still pending, the ready signal shows OK again.
Message in display (speed value).
3. When the controller enable is off, press the Red reset button 1x and the converter will report ready. Then restart enable. Message in the display (rdy).
The ready signal shows OK again.

3.4 The Display:

The direction of rotation and the speed are displayed

With the key "ESC"
the display changes
on the utilization in%



utilization in %

red stop button(RESET)

4. EM725 Level converter, target / actual comparison

4.1 The electronics module EM725

The module indicates an internal ready message of the inverter, as long as the inverter is under voltage.

Similarly, the display of the set point / actual monitoring is displayed here if it is no longer complied to - error target / actual.

In the module, the required signals for the Ductor motor are processed and transferred to the converter. The module is plugged into slot 1 of the drive and is only available in combination with the drive M300-06-03.



5. InterBus Module Type IB1000-01

Consisting of: InterBus A422-01 and Adapter boards A519-01-01 and A519-01-02
 Mounted on: bracket

5.1 InterBus-S remote bus A422

Short description:

The use of InterBus-S components allows for a uniform communication structure with considerably reduced wiring expenditure.
 The compact remote bus on the A422 is matching in function and design to the ANTEK product range.

Technical Data:

Remote bus in 2-conductor technology
 16 Bit Input- peripheral coupling
 ID-Code 3

Input voltage: 24 VDC ±20%
 Input current: ca. 250 mA
 Fuse: 1 A

analogue output: 4
 digital output: 6
 digital input: 16

Connection: 50 pol. / 3pol. Pin-strip
 Protection: IP 00
 Dimension: 100x160mm

Function assignment:

Control input


2 ¹⁵	Analogue value Bit 7 = MSB
2 ¹⁴	Analogue value Bit 6
2 ¹³	Analogue value Bit 5
2 ¹²	Analogue value Bit 4
2 ¹¹	Analogue value Bit 3
2 ¹⁰	Analogue value Bit 2
2 ⁹	Analogue value Bit 1
2 ⁸	Analogue value Bit 0 = LSB
2 ⁷) Selection: 00 = FU1, 01 = FU2
2 ⁶) 10 = FU3, 11 = FU4
2 ⁵	Reset - Fault
2 ⁴	Regulator release FU1
2 ³	Regulator release FU2
2 ²	Regulator release FU3
2 ¹	Regulator release FU4
2 ⁰	

Monitoring output

2 ¹⁵	Ready FU4
2 ¹⁴	Ready FU3
2 ¹³	Ready FU2
2 ¹²	Ready FU1
2 ¹¹	Set-actual FU4
2 ¹⁰	Set-actual FU3
2 ⁹	Set-actual FU2
2 ⁸	Set-actual FU1
2 ⁷	
2 ⁶	
2 ⁵	
2 ⁴	
2 ³	Motor protection contact FU4
2 ²	Motor protection contact FU3
2 ¹	Motor protection contact FU2
2 ⁰	Motor protection contact FU1


Terminal allocation:

Remotebus-IN

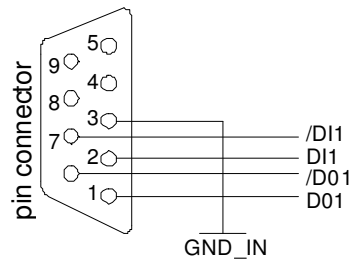


The remote bus in plug must not have a conductive connection to PE

Remotebus-OUT

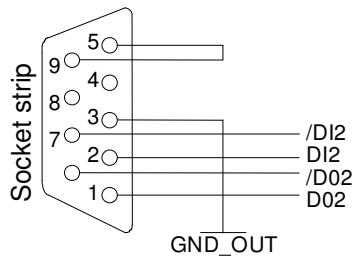


Displays:

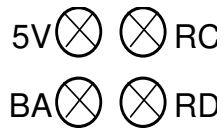



- 5V (GN) = SUPI operating voltage display after elapsed reset time.
- RC (GN) = „Remote bus check,, active when Bus out of order and no reset.
- BA (GN) = „Bus active,, signalizes an INTERBUS-S transmission
- RD (RD) = „Remote bus disable,, means that the forwarding Interbus-S interface is switched off.

View of front plate:

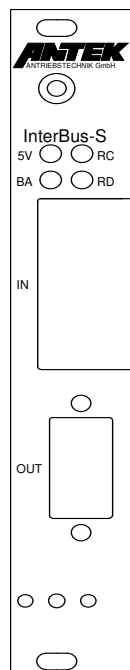

5.2 Adapter board A519

Version with connector X1 to X6

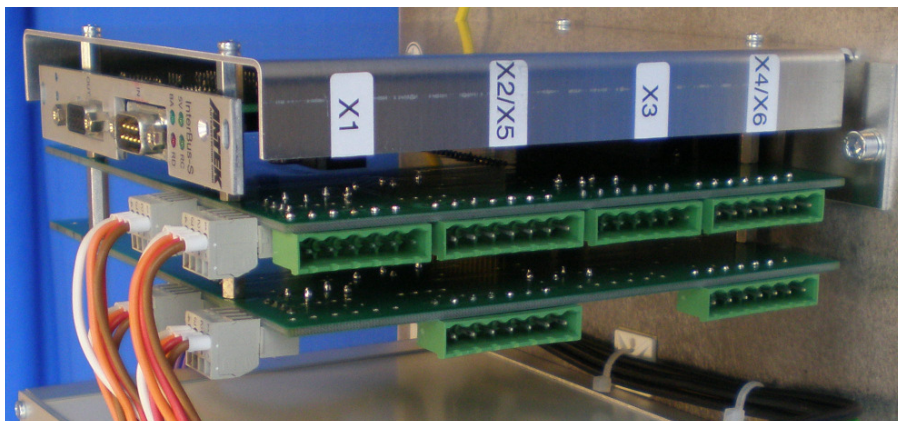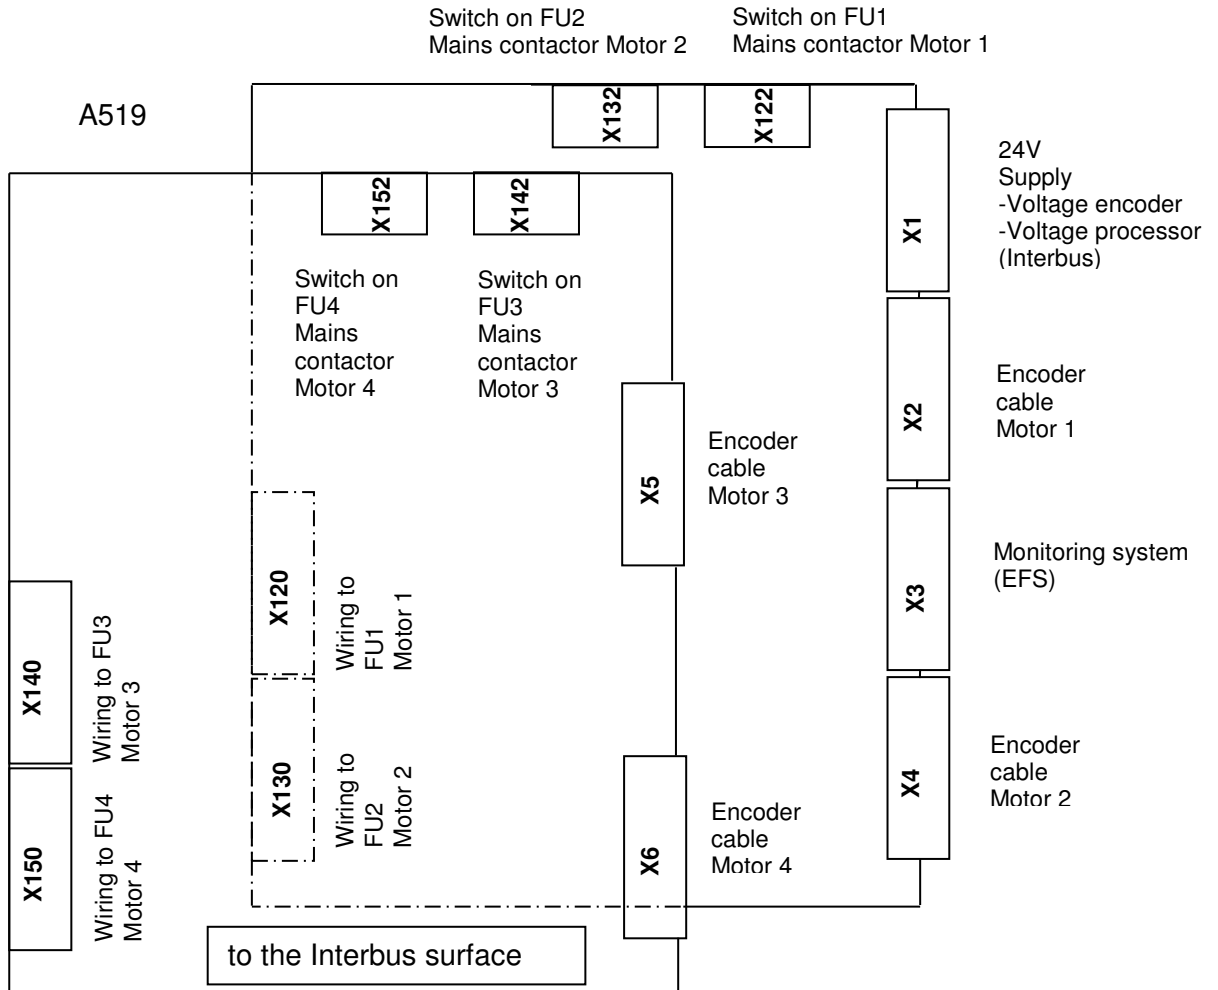

The module IB1000-01 with the adapter boards A519 is used for contacting the control signals and power supply externally.

The control of the FU's done over the InterBus module A422 with the adapter boards A519 to the frequency inverter M300.